
Quick Usage Guide to the Firmware 3.3

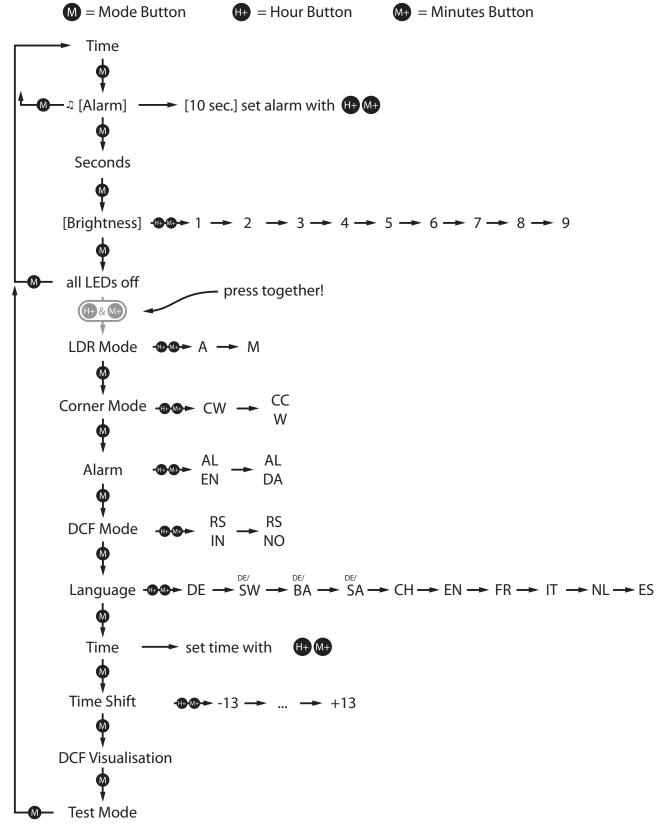

If applicable, the time is set by the DCF77 receiver.

Alarm: Only, if alarm is enabled durcing setup. The alarm does not differ between AM and PM.

LDR Mode: A = Automatic; M = Manual.

Alarm: AL/EN = ALarm ENabled; AL/DA = ALarm DisAbled.

DCF Signal: RS/IN = RadioSignal INverted; RS/NO = RadioSignal NOrmal.

Brightness: Only, if LDR mode is set to "M".

Corner Mode: CW = Clockwise; CCW = Counter Clockwise.

Languages: DE = German; DE/SW = Swabian; DE/BA = Bavarian; DE/SA = Saxon; CH = Swiss; EN = English; FR = French; IT = Italian; NL = Dutch; ES = Spanish